1½" Shower Trap with Top Access Waste with Flange / Grid



McAlpine & Co. Ltd
Kelvin Avenue
Hillington
Glasgow G52 4LF

Tel: 0141 882 3213
Fax: 0141 891 5065
Fax: (Sales Office) 0141 883 5697
www.mcalpineplumbing.com

Fixing and Maintenance Instructions

©McAlpine & Co. Ltd. February 2020

L-STWR

Fixing Instructions

Trap can be fully fitted prior to placing shower tray in final position.

1. Place rubber seal (4) in recess on top of trap (5) and raise to underside of shower tray.
2. Apply NEUTRAL silicone sealant between waste flange (3) and shower tray (other sealant types can attack / damage the trap / waste).
3. Hold trap outlet in desired position and screw waste (3) into trap (5) using spanner (6).
4. Test installation.

Important

- Do not overtighten - hand turn + ¼ turn is sufficient.
- Do not use trap to tighten assembly or support tray.


Trap Maintenance

1. Remove flange / grid (1).
2. Remove dip tube (2) by turning anti-clockwise and pulling upwards.
3. Remove debris.
4. Flush trap with clean water.
5. Replace dip tube and flange / grid (1).

Important

- Do not pour chemical drain cleaner down trap.
- Do not damage / distort the dip tube o-ring seal.

Replacement o-ring seals can be purchased from a plumber's merchant if required (McAlpine code CARD-31).

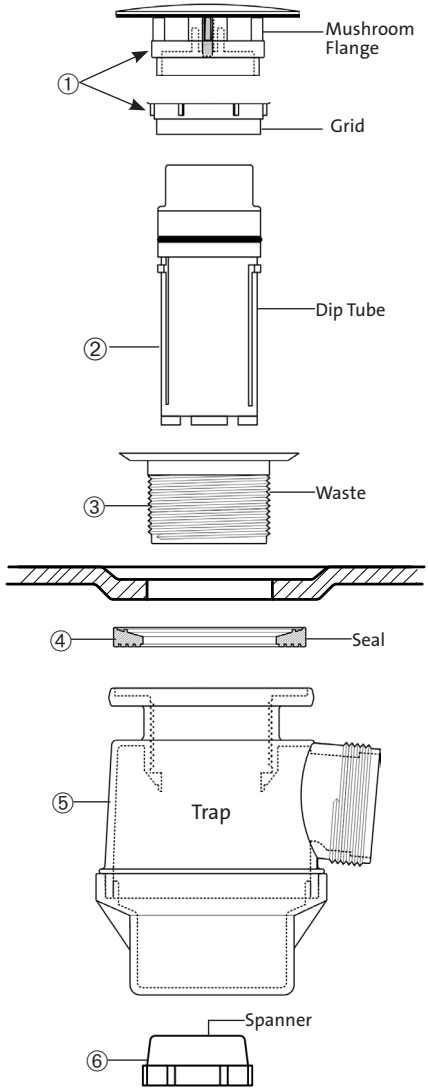

Dimensions and outlet attachments can vary according to product version. Please visit **mcalpineplumbing.com** for full details.